


# INSTALLATION INSTRUCTIONS ON OUTLET SURFACE MOUNTING KIT


## STEP #1.

Attach wall bracket onto wall, using (4) mounting screws (3/16" diameter screws to be provided by the contractor).

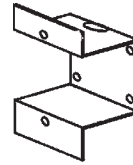


## STEP #2.

Insert Amico console back body into the wall bracket. Insert the pipe-stub UP and INTO the large cut-out hole, located in the top of the wall bracket. With (2) 6-32\*1/2" screws (provided with kit), tighten down the console back body onto the wall bracket.

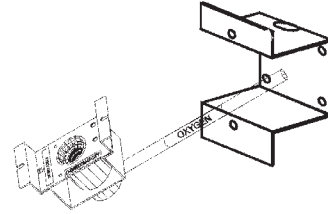


## STEP #3.

Position the box cover over the wall bracket and console back body. **NOTE:** Cut-out located on box cover must be placed over the pipe-stub.

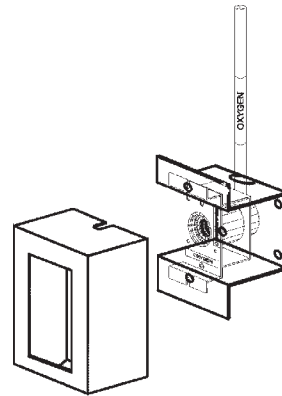

## STEP #4.

Insert Amico latch-valve assembly into the console back body. Use the screws on the latch-valve assembly to tighten the box cover and latch-valve into place.

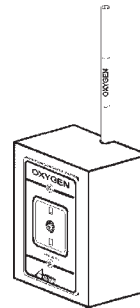

### CAUTION!

**DO NOT** overtighten the latch-valve mounting screws. Distortion of the latch-valve can occur.

Surface mounting kit consists of: (1) wall bracket, (1) box cover and (2) flat head 6-32\*1/2" screws.

D I S T R I B U T E D   B Y :